

4 Easy Steps

Software Set-Up SMART POWER

Step 1 - Add receiver to the system

- Click on “Add Receiver” box in the bottom right hand corner of the screen
- Enter the receiver number and any additional information (e.g. site name)
- Press “add” to finish and store

Step 2 - Program transmitters

- Select “program transmitters” from main options
- Choose either 2 or 4 button transmitter
- Receiver number - select the receiver you wish to program from the drop down list
- Transmitter type - select “automatic transmitter with number”
- Transmitter number - enter 01 or if the receiver has already been programmed choose the next available
 - you can check this by clicking on “transmitter report” at the bottom of the screen
 - Select +1 if you wish to add more than one transmitter in numerical order.
- Select button gate
 - Choose from the drop down list which button you wish to correspond with which gate
 - e.g. Button A / Gate 1
 - Button B / Gate 30
 - Button C / Gate 31
 - Button D / Gate 99
- Press “program the transmitter”
 - Do not remove the transmitter until the box turns green

Step 3 - Transmitter check (can firm details)

- Select “read transmitter”
- Press and hold either button on the transmitter
- The transmitter’s information will be shown on the screen if added

Step 4 - Transmitter report

- Select “receivers” from main options
- Click on the desired receiver on the list
- Select “transmitter report”
- If you would like to add any additional comments, click on the transmitter and type in the comments box, press “accept changes” to finish