


HB Transmitter

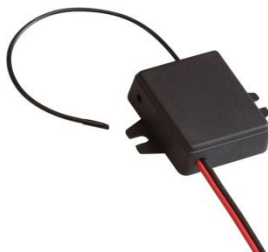

Installation:

- 1- Clip the red cable onto the positive(+) head-light cable (before the head light bulb connector)
- 2- Repeat step 1 but with the black cable on the negative (-) cable.
- 3- Operate car beams to check.

Technical specification

Frequency	433.92 MHz
Channels	4
Power supply	12V 24V
Current consumption	10 mA
Size	40x50x20 mm
Weight	44g