

S2C (Small 2 Channel) receiver



Add transmitters:

To add a transmitter to channel 1:

Press the button – receiver will beep once.

To add your transmitter press the chosen button on the transmitter within 5 seconds.

To register more transmitters you have an extra 5 seconds to press the other transmitter button.

The receiver will emit multiple beeps to confirm that registration time has finished.

To select the receiver mode:

The receiver can be set-up as Monostable, Bistable or As Long As You Hold.

1 To program as a Bistable:

- Press and hold the program button.
- Keep the button pressed while the receiver emits a long beep and release after the following short beep.
- After the next short beep press once to set.

2 To program as As Long As You Hold

- Press and hold the program button.
- Keep the button pressed while the receiver emits a long beep and release after the following short beep.
- Ignore the first short beep.
When the receiver emits second short beep press program button to set.

3 To program as Monostable

- Press and hold the program button.
- Keep the button pressed while the receiver emits a long beep and release after the following short beep.
- Ignore the first and the second short beeps.
After the third long beep, immediately input the desired time.

To input desired time:

To input 13 seconds:

Press and hold the button until the first short beep to enter 0

Followed by one short press for 1, the receiver will beep. After this beep press the program button three times to input 3. The receiver will repeat one long , one short and 3 short beeps to confirm 013.

The receiver will emit multiple beeps to signal that programming is finished.

To check that programming has been successful press the programmed button on your transmitter.

Delete a transmitter:

To delete a registered transmitter press the button on the receiver three times. Press the transmitter's button within 5 seconds to delete.

To change channel 2 to bistable:

Press and hold the button on the receiver.

Keep the button pressed until the receiver gives 2 short beeps.

After the next short beep press the button once to confirm.

To return receiver to factory settings:

Press the button and release after hearing four continuous beeps.

When the receiver next beeps press the button again.

Multiple beeps confirm the action.

TECHNICAL SPECIFICATION:

Power supply:	12-24V AC/DC
Current consumption:	15 mA on standby
Current output :	24V-1A relay NO
Memory capacity:	800
Channel output:	1 relay
Operation mode:	Monostable (1-999) Bistable
	ALAYH (As Long As You Hold)
Size:	37x41x15mm (mounting hole 4/8 mm)
Weight:	23g

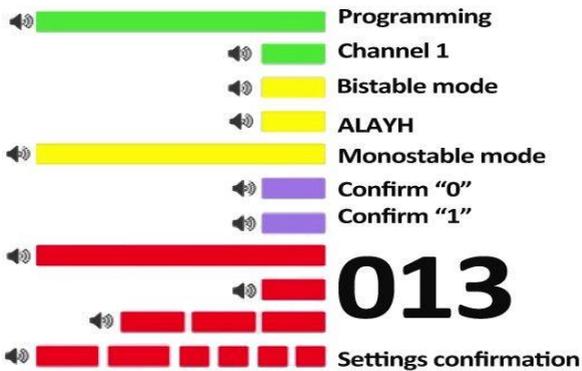


Table shows the indication sequence of audio signals.

Clip available to view at www.proximauk.co.uk