

Software Set-Up SMART 1000

Install the software and connect the programmer to your PC or laptop.

Step 1 Add receiver to system:

- Select receiver option
- Enter receiver number and additional information (for example site name, post code)
- Press 'Add' to finish and store

Step 2 Program transmitter:

Ensure you don't duplicate the transmitter position, because you will delete the existing one.

Select the type of transmitter:

- Local transmitter
If you wish to add your transmitter to the receiver on site choose this option. See option 3 Smart 1000- 15 Easy Step Set-Up.

Select the receiver you wish to program from the list

- Automatic transmitter general (the transmitter will be automatically allocated the first available position in the Receiver's memory (this number once allocated cannot be deleted or blocked!))
- Automatic transmitter with number
Select + 1 if you wish to add more than one transmitter in numerical order.

➤ **Master transmitter**

If you are unable to physically reach your receiver, you can program the transmitter as a master (software-" Program transmitter" – choose "Master transmitter"). The transmitter can be used in the same way as the buttons found on the base of the receiver.

See image1

Transmitter with PIN – for extra security.

- Tick the transmitter with PIN option
- Example : if the PIN is 1,2 ,3 the top button on the transmitter has to be pressed once and the bottom button twice and the top button a further three times. You can enter each button up to three times using any combination with numbers from 1 to 9.
- The PIN must always be entered starting with the top button.
- Once the transmitter is active the gate can be opened in the normal operation way. When the transmitter is unlocked the LED will light up when any button is pressed.
- See image 2

Step 3 Transmitter check (confirm details):

- Select transmitter option (to check that the transmitter has successfully been added to the system)
- Press either button on the transmitter and its information will be shown on the screen if added.

Step 4 Transmitter report:

- Select receiver option
- Choose receiver from the list
- Press report (active transmitters and their positions will be shown)
- Save as – allows the report to be saved on your PC or laptop and can be printed if required.